





## POSITIONS

and requirements for installation

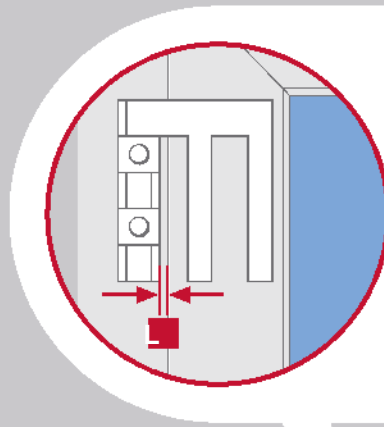

### Installation on the handle side of a single-winged door and/or single-

**L** In order to achieve the best possible protection against the window and/or door being pried open on the handle side, the gap between the sleeve and the window sash and/or door wing edge must be no more than a maximum of 5 mm.

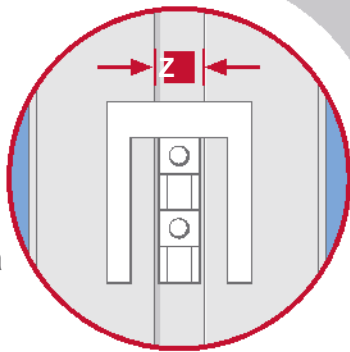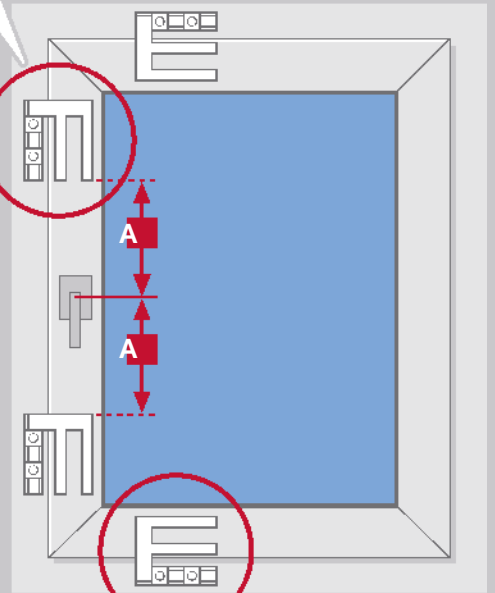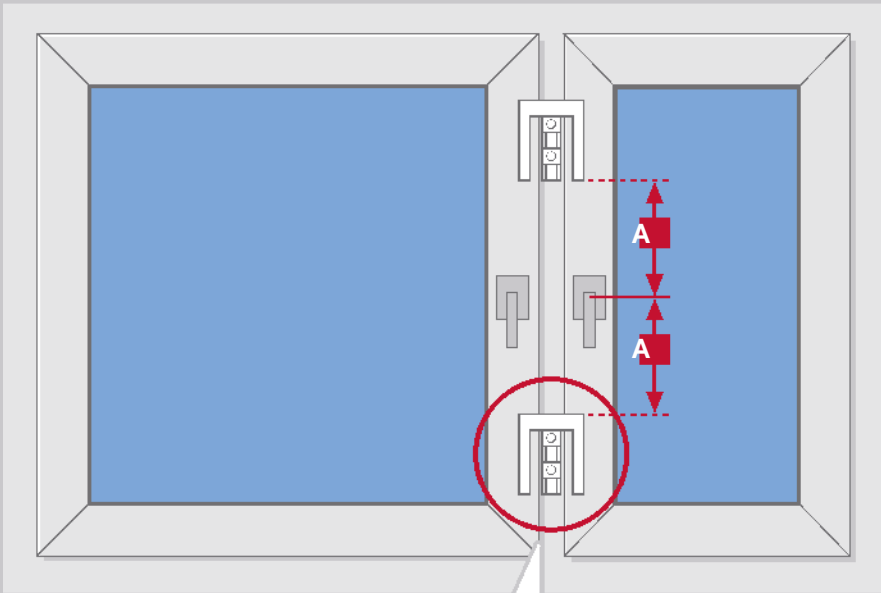


### Mounting on the bar of a Double windows

Mount the EM3 sleeve between the window below or above the handle.

**Z** The gap between the window must be at least 18 mm and maximum 20

**A** The distance to the handle pivot should be at least 150 mm.

In order to secure both window sashes, the EM3 bar must be placed in the centre of the sleeve.

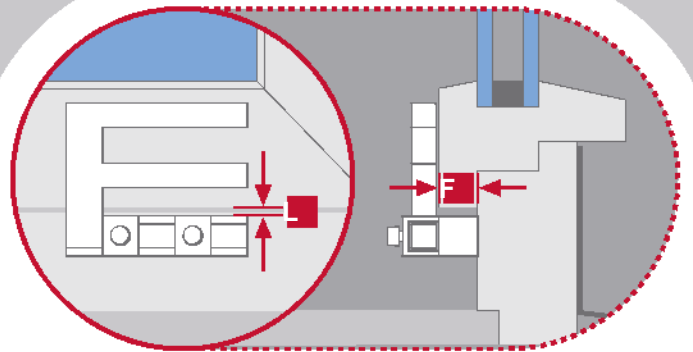

### Installation above and/or a window sash or door wing

**L** In order to achieve the best possible protection against the window and/or door being pried open, the gap between the sleeve and the window sash and/or door wing edge must be no more than a maximum of 5 mm.

**E** The sash has to be at least 15 mm thick.