


# Mounting EM3

Alternative attachment

# Attachment in case of double windows

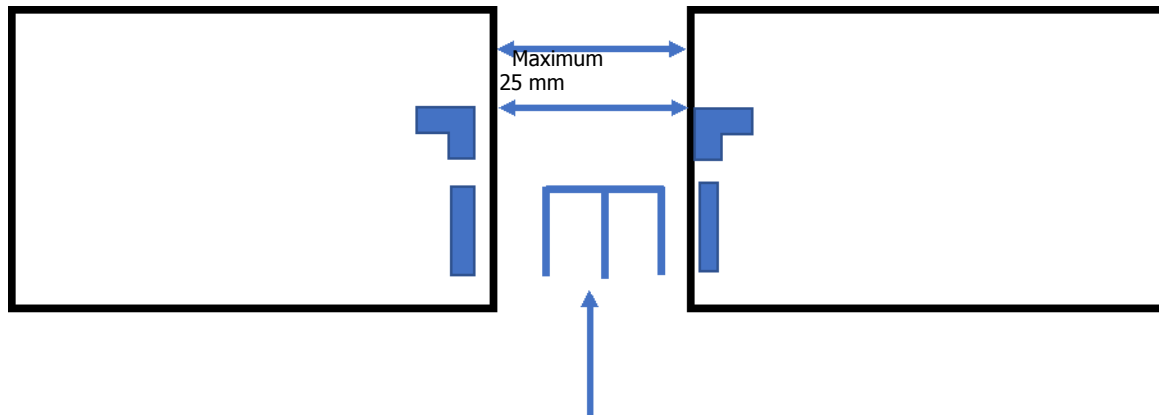

Attach the EM3 sleeve to the frame below / above the handle. The EM3 bar is inserted into the two sleeves with the two outside arms. The installation is easiest, if the sleeves are attached by double-sided adhesive tape, and the fit accuracy of the bar is tested then. When the bar can be inserted into the sleeve easily, the sleeves should be drilled and mounted.